# SeeMeCNC Guides RostockMAX v3/3.2 AC Heated Bed Installation

How to upgrade your RostockMAX v3/3.2 with a 350W AC full metal heated bed.

Written By: Caleb Fairres



# **TOOLS:**


- 5/32' -or- 4mm Drill Bit (1)
- Power Drill (1)
- #2 Phillips Screwdriver (1)
- 5/16" or 8mm wrench (1)
- small drop oil any type (1)
- #1 Phillips Screwdriver (1)
- wire stipping tool (1)
- wire terminal crimping tool (1)
- Cleaning Alcohol and Paper Towels (1)
- Electrical Tape (1)

## Step 1 — Before You Start

	Introduction - Read Me First!
machine. Before	s your instruction manual for your new SeeMeCNC® 3D printer using your new 3D printer, thoroughly read and understand this and effective operation of the machine.
	Warning
	rty damage, serious injury, or death can result from not following varnings in the manual or misuse of the machine.
Automatic mac power is conne	nine can start unexpectedly. Pay close attention and keep clear while cted to the machine.
Adult supervisi	on required. Children under 18 years of age require supervision.
A DANKER Shock Hazard Lawrange Hengevelar	The machine power supply is connected to AC voltage and can be hazardous. Disconnect power before servicing this machine.
A CANADA AND A CAN	The hot end of the machine can reach very high temperatures of 700F and cause serious burns. The heated print surface (heated bed) can also reach temperatures high enough to cause severe burns. Allow both to cool for 20 minutes after turning off power.
Ann And Rein And Reintsri	Use caution near moving parts of the machine. Keep body and loose articles clear.
Fire class	Risk of Fire. Do not leave machine unattended.
Use genuine pa	ints manufactured or designated by SeeMeCNC.
	smoke, or fumes could be omitted by some materials you could use e. In such case, you should install ventilation.
	Choking Hazard. This machine contains small parts and can produce small parts which can be a choking hazard to children.
Keep a copy of	this manual near the machine easily accessible to all operators.
	Use of this machine is at your own risk.
Visit	www.seemecnc.com to contact us if you have any questions.

- Proceed at your own risk.
- First, click here to read safety information. This safety information may be updated at any time so occasionally check for updates.
- NOTE: This guide is intended to be followed online in order to fully utilize the links and documentation found within.
- Locate the components for your AC heated bed upgrade kit.
- If you are missing parts or have a defective component, please submit a support ticket through the link under the 'Support' tab on the SeeMeCNC website.

## Step 2 — Proceed at own risk

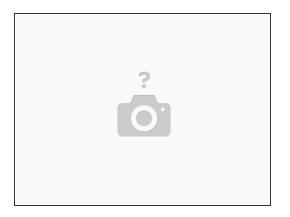

- $\bigwedge$  Use this kit and instruction at your own risk.
- SeeMeCNC will not accept responsibility for property damage, fire, injury, or death.
- (i) Please use all precautions to protect the AC line-voltage wires.
- (i) Some installations will require problem solving for fit and function.

### Step 3 — Remove Old Heated Bed



Make sure the printer is turned off and unplugged before following this guide!

- Remove and save boro glass plate for later
- Cut existing power and thermistor wires near each soldering connection of the old Onyx heated bed.

#### Step 4 — Drill Bed Mounting Holes



- Place the new 84671 RMAXv4 Heat Spreader Laser Etched as shown to position holes.
   (i) Note: counter sinking the mounting and thermistor holes is not necessary (as pictured).
- Make sure the heat spreader is lined up with the hole where the bed glass previously sat as perfectly as possible before continuing!
- Use the 4mm (5/32") drill to make holes in the three places shown for later bed mounting

#### Step 5 — Drill Holes & Mount SSR



- Remove the clear plastic cover from the 26193 SSR
- Place the SSR in the machine as shown
- Mark and drill the mounting holes using the 4mm (5/32") drill
- Position the AC output side of the SSR near the Y tower
- Use the two 30117 6-32 x 5/8"L Phillip Pan head SS and two 30164 6-32 Nylon Lock Nut SS to secure the SSR in place
- (i) During this step would be a good time to vacuum or blow out the sawdust from your machine.

## Step 6 — Connect the DC bed power to the SSR



- Strip 1/4" off the end of each of the existing black and red 12awg bed wires that were previously snipped.
- Crimp the **26178 Ring Terminal Yellow Insulated for #8 Stud and 12awg** as shown to the ends of the wires.
- Attach the red wire to the V+ terminal number 4, and black DC- to terminal number 3 on the SSR


#### Step 7 — AC Main Power Wiring



A Be certain your machine is not plugged in to power before continuing!

- Strip 1/4" off the white and black wires included in the kit, and crimp one ring terminal to one end of the white wire, and one ring terminal to each end of the black wire.
- Attach the white to N and black to L on the power supply, as shown in the photo.
  - (i) Note: It's recommended to turn the existing red ring terminals upside down when installing them both on the same screw, as shown in the photo.
- Attach the other end of the black wire to the SSR terminal number 1.

#### Step 8 — Preparing the Bed

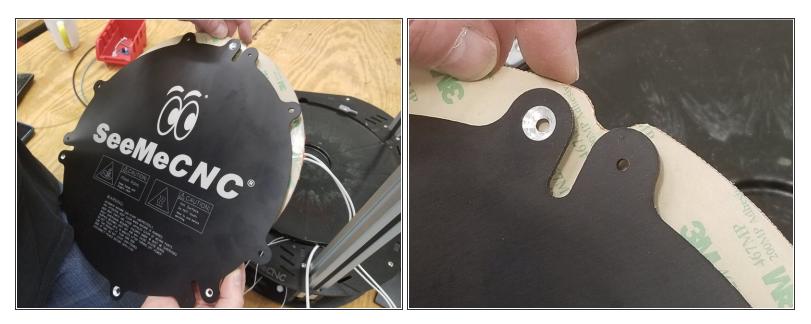


- Clean the back of the aluminum heat spreader with alcohol and a paper towel.
- Peel the backing off of the adhesive on the 58801 Silicone Heater 300mm Dia 350W REV B
- Apply the heating pad, aligning the three notches with the deeper grooves on the heat spreader, and the white AC wires exiting from the right of the bed, as shown in the photo.

## Step 9 — Installing the Bed Clamps




- Install the three 58815 Build Plate Clamp for 3mm Boro Glass Black as shown, using the 30308 M3 .50 x 18mmL Phillip PH Machine Screw SS, and three of the 30321 M3 0.50 Nylon Lock Nut SS
- Tighten to feel, where it's snug but the clamp still turns, firmly.
- Install the second Nylon Lock Nut and tighten so the first nut won't come loose.
- Apply the 26659 Kapton Dot 1 inch Dia as shown, under the clamping portion of the bed clamp.
   It is very important that the kapton dots are applied properly, in the proper location and with little to no air bubbles!

#### Step 10 — Installing the bed Thermistor

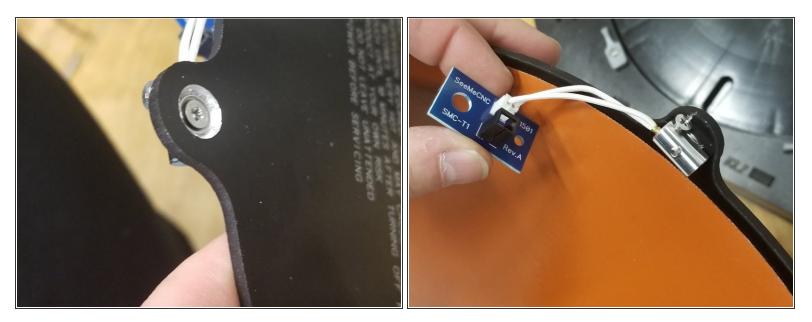


- Use the provided 30234 M3 .50 x 10mm Phillip Flat Head Machine Screw and 30449 #4 SAE
   Flat Washer SS to install the 26206 Thermistor Cartridge Mounting Block as shown.
- Fully insert the **26194 Thermistor Cartridge 100K** and gently secure in place using the second included M3 x 10mm flat head screw
- Plug the thermistor into the 51501 Temp Board SMC-T1 thermistor board

## Step 11 — Crimping the Thermistor Wires

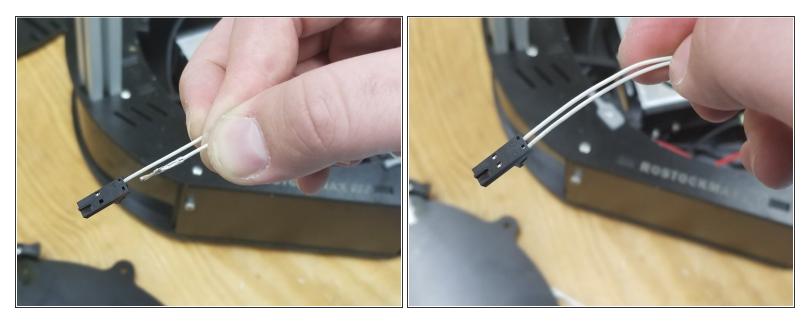

- Strip about 5mm of the existing white 26awg thermistor wires exiting the Y tower (that you snipped from the old bed)
- Be sure the thermistor wires are about 400mm in length from where they exit the Y tower.
- Use the included 26205 SL Crimp Terminals for Molex Latching Connectors and a pair of crimpers to crimp the terminals to the ends of the white wires.
- House them in the **26202 Molex SL 2 Pin Latching Connector Housing Female**, making sure they are inserted all the way with a click.

## Step 12 — Installing the Bed Wiring

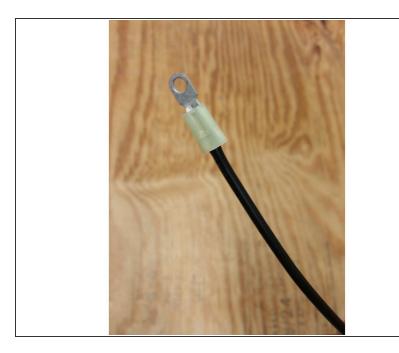

- Strip a 1/4" off of the remaining large black wire from the kit, and crimp a 26178 yellow ring terminal to one end.
- Attach the ring terminal you just crimped to the SSR in terminal number 2.
- Strip 10mm off the other end of the black wire
- Re-install the clear plastic cover on the SSR

#### Step 13 — Installing the Bed Wiring (cont'd)



- Pass the silicone heater wires through the existing plastic bed insulator as shown.
- Strip the wires from the heater and attach one of the wires to the black wire leading from the SSR terminal number 2, using the 26228 Splice Conn. Insul. 10-16AWG Crimp connector
- Attach the other white wire to the white wire leading from N on the power supply
- Plug in the SL connector you installed on the thermistor leads to the SMC-T1 thermistor board
- Apply electrical tape to the white wires coming from the silicone heater as shown to cover the wires when folded back towards the bed.

## Step 14 — Installing the Bed Assembly



- Apply a drop of oil to the tip of the threads on the three 30034 6-32 x 1.75"L Phillip Pan Head
   Screw SS
- Pass the pan head screws through the mounting holes on the heat spreader, then through the 84612 Bed Mounting Post (PEEK), the melamine frame of the printer, then the 30450 #6 SAE Flat Washer - SS with the three remaining 30164 nylon lock nuts

## Step 15 — Adjust Printer Height in the Firmware

Contraction of the second of t	Eding Onemotive Field Protection Control of
RESTOCKMAX R2 SecNCCCC	

- Re-install all the covers on the machine.
- Plug in the machine and turn it on.
- Follow these guides and decrease the printer height in your firmware by 23mm:
  - <u>RAMBo</u>
  - DuetWifi
- After changing the machine height in the firmware, follow this guide to fully re-calibrate your printer.
- Note: Make sure the probing speed in your "First Probe" macro is set to F800 in both locations shown in the photo!